8690

BEFORE USING YOUR CREWHIT LIFEJACKET IMPORTANT: PLEASE READ THIS MANUAL

Owners Manual

REGULATION (EU) 2016/425









# THE CREWFIT 150N JUNIOR LIFEJACKET

# 150N LIFEJACKETS

This level 150N lifejacket will give a reasonable assurance of safety from drowning to a person who, for whatever reason, is no longer capable of helping themselves fully. This level is intended for general application or for use with foul weather clothing. It will turn an unconscious person into a safe position and requires no subsequent action by the user to maintain this position. This jacket is suitable for offshore use.

### IMPORTANT INFORMATION

- Train yourself in the use of this device
- Teach the child to float in this lifejacket
- For children less than 6 years of age use automatically operating devices only
- Do not use as a cushion

# **CREWFIT 150 JNR**

- ISO12402-3 approved
- High performance 107N Inflation chamber
- Exceptional turning speeds Hard wearing outer cover
- Single soft loop deck safety harness ■ ISO 12401:2009
- Twin burst cover zip
- Rapid stainless steel adjusting buckles for secure fit.
- Single lifting becket
- Single crotch strap. ■ Whistle





Tel: +61 (2) 8797 4338 SMITHFIELD NSW 2164, AUSTRALIA

RFD (AUSTRALIA) РТҮ. LTD

00380 HETSINKI



FOLD OF C VISIT WWW.Crewsaver.com Fax: +44 (0) 1329 2362 18 [6]: +44 (0) 1329 8200 00 Hampshire, POT3 UFZ, UNITED KINGDOM Crewsaver, Survitec House, Lederle Lane, Gosport

#### crewsaver.com/findastockist

To find your nearest Crewsaver approved service station please visit: Always return the lifejacket to a Crewsaver approved service station for repairs and servicing.

Mever try to repair a lifejacket yourself. You could cause more damage and render the lifejacket irreparable or affect the warranty.

Your lifejacket must be serviced on an annual basis.

#### SERVICE ANNUALLY

IIIO2:IAAPSMAI2:MMM

For more information or to register your product please visit our website

Please copy the Product Serial Number and Date Purchased below for your own reference:

been serviced annually at a Crewsaver approved service station. Remember your lifejecket is an impotating place of safety equipment and should be serviced approved service stallon. Crewssver will not accept any lifejeckets for warranty that have not returned that are not registered with Crewsaver will not be considered for warranty.

The guarantee covers all lifejackets registered via the Crewsaver website, any products

The guarantee does not cover the effects of accidental damage, normal wear and tear, or mistreatment, or where repairs have been carried out other than by a Crewsaver approved mistreatment, or where repairs have been carried out other than by a Crewsaver approved.

where equipment is either worn for prolonged periods or in severe conditions. normal leisure purposes. This excludes commercial and industrial use and other applications The guarantee covers all Crewsaver life)ackets and combined life)ackets/harnesses worn for

This 3 year guarantee includes all parts and labour to repair defective equipment and the


commitment to dnaity enables us to offer you a FULL 3 YEAR GUARANTEE on your lifejacket.

#### YOUR 3 YEAR GUARANTEE

# DONNING YOUR LIFEJACKET


#### DONNING THE CREWFIT 150N JUNIOR LIFEJACKET

- 1 & 2 Don like a normal jacket.
- Fasten front buckle
- Adjust waist belt by pulling side webbing backwards for a close secure fit.
- Fasten crotch strap buckle and adjust straps by pulling webbing downwards for

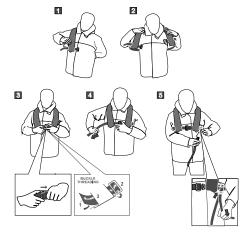

# YATZADAL







yelb to ensure you are attached securely in adverse conditions. A 2 Hook Safety Line should be used when connected to a strong point on the boat, this will

both 2 hook and 3 hook safety lines.

Available within the Crewsaver range and suitable for use on the Crewfit 150N Junior are The Crewfit 150M Junior harness is suitable for anyone between 20kg - 50kg.


#### USING SAFETY LINES WITH A HARNESS LIFEJACKET

#### KNOW YOUR INFLATION TYPE


# KNOW YOUR INFLATION MECHANISM TYPE

#### UML MK 5: AUTOMATIC

- 1 Check that the automatic firing capsule (C) is screwed fully onto the operating mechanism (B). Ensure that the capsule (C) has not been fired inadvertently by checking that the bottom indicator shows green (D). Also check the expiry date on the side of the capsule. Do not use a capsule that is out of date
- 2 Check the CO<sub>2</sub> cylinder (A) is securely screwed into the operating mechanism with EXOLOK mechanism and label (F) and fit Mesh sleeve (G), Check that the bottom indicator (D) shows green.
- 3 Ensure toggle (E) is easily accessible.



On an automatic model, unscrew and remove the automatic capsule first



e Keplace the valve cap (b) back into the normal position on top of the Inflation tube.

- 2 The Mejacket should now be completely deflated, and can be folded into the cover as before.
  - 4 Squeeze the Mejacket a second time expelling as much air as possible.
  - the concentration of any remaining CO.

3 When as much gas as possible has been expelled, re-inflate the Mejacket orally. This will reduce




episul lie eut tedxe of fexelent eut ezeenbs. z





Reverse the valve cap (a) at the top of the inflation tube and hold it in the valve.

#### DEFLATING YOUR LIFEJACKET AFTER USE



3 Ensure once inflated that you replace the valve cap (a). It is important to innate turner, the cover by hand and continue to blow into the tube until it is difficult

nutorq as the inflation chamber takes shape. To make this easier open up 2 Blow into the inflation tube. The protective cover on the lifejacket will

J Remove the valve cap (a)at the top of the inflation tube (b).

# INFLATING YOUR DIFEDECKET





It required all inflatable fregisckets can be inflated orally without fining the  $\cap\cap^2$  cylinder.

#### USING INFLATION TUBE ON INFLATABLE LIFEJACKETS

# **RE-ARMING**


#### RE-ARMING YOUR AUTOMATIC OPERATING MECHANISM

Always re-arm your lifelacket ready for use before you stow it away. The operating Aways reamin your inflaction ready for use ordinary of which was in the operating mechanism must be throughly dried before re-arming. When re-arming your lifejacket it is important you use only Crewsaver supplied components. For your nearest supplier contact Crewsaver or see www.crewsaver.com

- 1. AUTOMATIC ONLY Take the new automatic firing capsule and screw onto the operating mechanism in a clockwise direction. Screw tightly ensuring there is no gap between the capsule and the base of the operating mechanism. The bottom indicator will turn green when the capsule is tightened correctly.
- when the capsule is ignificance correctly.

  Check that the cylinder-sealing gasket in the end of the operating mechanism has been correctly fitted, or replaced if necessary. Check the new CO<sub>2</sub> cylinder has not been used. FIT EXOLOK mechanism (A) and screw cylinder into the main body in a dockwise direction (B). Ensure the cylinder is screwed right down and hand tighten. The top indicator will turn green when the cylinder is tightened correctly. Secure with EXOLOK label (C) then fit mesh sleeve. The operating mechanism is now re-armed, Both indicators should show green, DO NO

USE if either indicator is red.

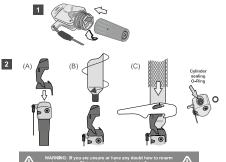

www.uml.co.uk for more details on the UML Pro-Sensor MK5 mechanism

#### UNPACKING YOUR LIFEJACKET


#### OPENING THE LIFEJACKET COVER



- 1. Open the velicro tab.
- 2. To avoid damaging your lifejacket zip, pull apart the zip, open the zip via the quick burst elements, holding the cover either side.
- Once the zip has opened, insert your finger and slide it around the lifejacket. Undo the zip all the way around the outside of the lifejacket. The lifejacket cover should now be open and the inflation chamber visible. Fully separate the zip. Both sides of the zip should be apart, with the zip slider free to move back around the lifejacket to the start.

#### PREPARING ZIP FOR RE-PACKING


- 1. Ensure that the zip slider is separated on one side.
- 2. Slide the zip around to the right side of the jacket as worn.
- 3. Feed the zip teeth into the slider ready to re-pack.




#### REPACKING YOUR LIFEJACKET


Ensure that your lifejacket is completely dry before packing. (Refer to 'Care and Maintenance' for details on storing and cleaning your lifejacket)

- 1 Run the zip slider round to the left side of the jacket. (Refer to 'Opening the lifejacket cover')
- 2 Fold the bottom left of the bladder keeping operating head capsule on top of it.
- 3 Fold the right side of the bladder over the operating head.
- 4 Fold the left side of the bladder over.
- 5 Tuck the inflation chamber inside the cover and secure in place with the velcro tabs.
- 6 Do up zip past velcro tab. Ensure the pull toggle is accessible.
- 7 Fold the bottom right of the bladder and lifting becket up into the cover.
- 8 Concertina the right chamber with two folds and tuck in the lifting becket.
- 9 Fold the outside edge inwards.
- 10 Tuck chamber inside the cover and secure in place with the velcro tabs.
- 11 Concerting the chamber collar with two folds and tuck in the fabric neck retainer. 12 Fold in the last corners of the chamber and bring the zip round to close.
- 13 Make sure velcro tabs are secure and zip ends are tucked up inside the cover.



# REPACKING YOUR LIFEJACKET

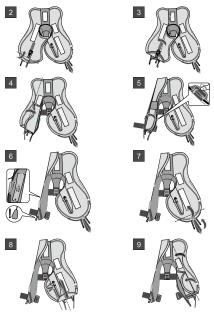

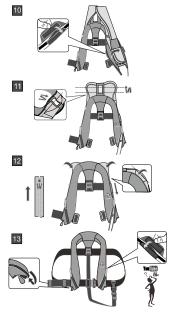

#### CARE & MAINTENANCE

Your lifejacket is an important item of technical safety equipment. The working life of the

- Check that both status indicators are displaying green ■ Check the expiry date, if any items have expired they MUST be replaced
- before use

  (Refer to 'Re-arming your lifejacket') for details on how to fit a new

lifejacket will be prolonged if the following instructions are adhered to:

- Ensure a fully charged cylinder is tightly fitted
   Ensure that the manual pull toggle is accessible

#### IF A RED INDICATOR SHOWS, CHECK THE FOLLOWING ITEMS:

- Ensure a fully charged cylinder is tightly fitted.
- Ensure an automatic capsule is tightly fitted (on Pro-Sensor Automatic) ■ Check that the expiry date has not passed and check that there is a plate in the base of the capsule. If there is no plate and a red dot is visible the capsule has been fired and must not be used. See re-arming your lifejacket for how to fit a new capsule onto your operating mechanism.
- Ensure that the manual pull toggle is accessible.

#### AFTER USE (if Inflated)

- Rinse your lifejacket after use. (Refer to Cleaning & Storing Your
- Re-arming your lifejacket. (Refer to Re-arming pro-sensor operating

#### PERIODICAL CHECKS

- A complete inspection of your lifejacket is to be carried out every three months.

  Check the fabric for cuts, tears, abrasion and signs of damage caused
- Leak testing is an important part of the periodical checks. Inflate your lifejacket orally until firm. Leave overnight or for a minimum of 12 hours. A lifejacket that is leaking will not hold its firmness and must be replaced. (Refer to 'Repacking the Crewfit 150N Junior')

NOTE: Avoid wide variations in temperature when performing this test. Temperature variation can cause the inflatable chamber to lose firmness. Examine the lifelacket for signs of damage, wear and tear or contamination. Pay particular attention to the webbings and the stitching on your lifejacket.

Perform the oral inflation valve test as follows:

- Fully inflate the lifejacket
- Place the oral tube into water and check for bubbles

If bubbles appear a replacement valve is required.
Check the expiry date on the automatic firing capsule. If it has expired it should be replaced.



### CLEANING & STORING YOUR LIFEJACKET

It is important that the lifejacket is stored in a dry, well-ventilated space. If the lifejacket is wet or damp, and it is fitted with an automatic firing capsule, it is advisable to remove the capsule until the Ifejacket is completely dry. Any dampness in the Iflejacket may penetrate the capsule and eventually cause it to operate the Iflejacket. It is advisable to hang the Iflejacket to dry on a coat hanger until it is completely dry before stowing. To avoid inflation, do not submerge the lifejacket in water unless the lifejacket has been used or the capsule has been removed.

Periodically rinse the lifejacket in fresh water, particularly if it has been in contact with salt water. Oil and similar marks should be removed by washing with warm soapy water.

Never put your lifejacket in a washing machine, spin or tumble dryer.

After washing always allow your lifejacket to dry naturally before stowing in a dry place.

#### OTHER IMPORTANT INFORMATION

Your new Crewfit has been tested to meet a temperature range between -10°C and 40°C as required by BS EN ISO 12402.

■ When the temperature is well below freezing, your lifejacket may operate much slower than normal and at very low temperatures a fully discharged cylinder may not adequately inflate your lifejacket. In these temperatures the oral tube should be used for additional topping up if necessary.

■ This lifejacket is not a PFD until fully inflated. Full performance may not be achieved using certain clothing or other circumstances. Certain circumstances will alter performance, such as waves or the wearing of garments which provide additional buoyancy. The buoyancy provided by the jacket can be affected if heavy objects are carried in the pockets.

■ A whistle is located on the inside left inflation chamber. Six long blasts repeated at intervals is the international distress signal.







Range



# **TESTING YOUR LIFEJACKET**

Practice and training are required before use.

In an emergency, there is no time to learn how equipment works. Crewsaver recommend that you try your lifelacket to ascertain its performance before use in an emergency. This will also help familiarise yourself with the product.

When trying out your lifejacket, remember that you may need replacement parts or re-arming kits to get your lifejacket ready for use again.

If you are a weak swimmer it is strongly recommended that you use an automatically operated lifeiacket or an inherently buoyant device. Step 1: Put on your lifejacket by following the donning Instructions. (Refer to 'Donning the

Crewfit 150N Junior') Step 2: Stand in shallow water or in a swimming pool, ensuring that the water is just deep


enough for your head to be above the water's surface. Step 3: Inflate your lifejacket. This can be done the following ways:

Automatically: If your lifejacket is an automatic it should fully inflate within five seconds of water contacting the automatic firing capsule. This activates the operating mechanism and releases the CO, cylinder into the lifejacket.

Manually: The lifejacket can be activated manually by a sharp downward pull on the toggle. The lifejacket should fully inflate within 5 seconds.

Oral Inflation: If you are using a pro-sensor automatic lifejacket ensure that the automatic firing capsule has been removed before entering the water. Open the lifejacket cover and locate the oral inflation tube, remove the cap and blow into the tube.

Once inflated see how the lifejacket holds you in the water, noting the position that it holds you in with your mouth well clear of the water's surface and your body at an angle.








#### **TESTING YOUR LIFEJACKET**

While in the water it is also recommended that you try out your lifejacket

Your lifejacket should be tested whilst wearing any offshore clothing. Check that the lifejacket will turn you from a face down position to a face up position.

NOTE: Some offshore clothing in particular drysuits and immersion suits can trap air - this may

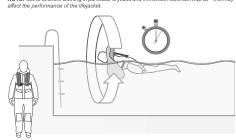

After testing your lifejacket completely deflate the lifejacket using the oral inflation tube. Let the lifejacket dry thoroughly. Do not expose to direct sunlight or heat. Re-arm your lifejacket following the relevant re-arm & re-pack instructions. (Refer to 'Rearming' and repacking

#### CORRECT USE OF LIFTING BECKET

- 1 Lifting becket is located below the left lobe of the
- 2 Use lifting becket to haul casualties from the water





